


## 1) Downloading and Installing the WalkingHotSpot Application

The Symbian S60 version of the WalkingHotSpot™ (“WHS”) application is delivered to your smartphone as a sis installation file from the Internet ([www.walkinghotspot.com](http://www.walkinghotspot.com)). Installation begins automatically after the download is complete. There will be three (3) screens issued giving the user the ability to abort the installation:

1. Install WalkingHotSpot? (Y/N)
2. Version detail screen: (Continue / Cancel)
3. Warning about increased data usage: (OK / Cancel)

Follow the prompts and answer the questions on the phone to install the application.

## 2) Starting WalkingHotSpot

To run the WHS application, select the  icon in the folder where installed applications are stored, typically “Installations” or “Applications”. This launches the application in the idle state as illustrated by the red **“OFF”** on the main WHS screen (shown to the right). To start the application select **Start** (right soft key). Until you purchase a service plan (during the trial period) the registration screen will pop up. If you have purchased WalkingHotSpot and have a 12 digit code, enter it in the boxes displayed on the phone and hit **Register** (left soft key); if not, select **Skip** (right soft key) to continue.



**NOTE:** The first time you run WalkingHotSpot, you may be asked to reboot the phone. If so, cycle the phone's power (turn off then back on) and then restart WalkingHotSpot.

## 3) Configuring WalkingHotSpot

Most of the settings can only be altered when the application is in the idle mode. The first time you run WalkingHotSpot, a “please enter settings” message will appear followed by the Main Settings Screen. The **“Cell network settings”** (access point) is the only required setting. Selecting it will bring up a list of valid network access points available for connectivity. This is the high speed connection from the mobile network operator that will be used for internet connectivity (backhaul). Please ensure that the proper selection is made. If there are any questions on which access point to use, contact your carrier to verify which network access point should be used for internet connectivity.

## 4) Connecting Clients to WalkingHotSpot

As mentioned in section 2 above, to begin using the WHS device (phone) as a WLAN hotspot, select **“Start”** (right soft key) from the WHS Idle Screen and answer any questions that appear on the phone's screen. WalkingHotSpot is active and ready for connections when the status changes to a green **“ON”**. Five WHS clients can simultaneously connect to the Internet with WalkingHotSpot.

WHS clients (i.e. laptops and MP3 players) connect to WalkingHotSpot just like any other WLAN hotspot. Please consult your WHS client's documentation for details on how to connect to Wi-Fi networks.

- Black circles represent the number of connections (IP addresses) available
- Green circles indicate the number of active connections (IP addresses) in use

## 5) Exiting the Application

From the main WalkingHotSpot screen, select **“Options”** (left soft key) and then **“Exit”** which terminates WalkingHotSpot and stops any active connections.